

# 88300


#### FLOOR DRAIN TRAP PRIMER WITH DISTRIBUTION UNIT


### **FEATURES**

The Automatic Trap Primer Valve requires no adjustment.

The priming valve is automatically activated when it senses a pressure drop of 5 to 10 P.S.I.G. (35 to 70 kpa). The valve's operating range is 35 to 75 P.S.I.G. (245 to 525 kpa).

- Includes integral vacuum breaker ports and must be installed on water lines serving a frequently used fixture such as a urinal or water closet.
- Trap Primer Distribution Unit's patented design gives installer a positive means to prime up to four traps using a single precision plumbing trap priming valve.

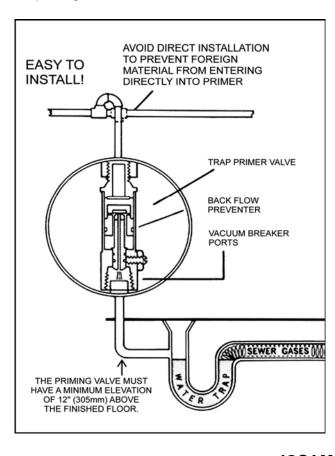

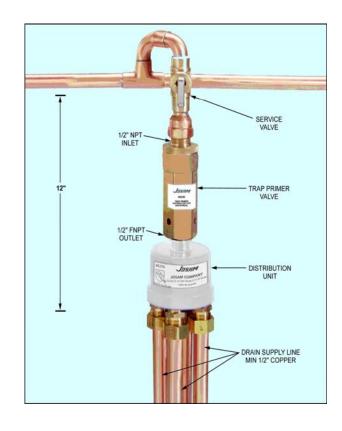

#### INSTALLATION

- It is recommended that the trap primer valve be installed with a service valve.
- Must be installed level.
- Must be installed with access for periodic inspection.
- Must be installed on a cold water line of 1-1/2" or less.
- Primary Valve must have a minimum elevation of 12" (305 mm) above the finished floor.
- If all four outlets are not used, plug remaining outlets with the pipe plugs supplied.

## **JOSAM COMPANY**

Michigan City, IN 46360

Phone: 800-627-0008 Fax: 800-627-0008

www.Josam.com