
SS DRAIN

INSTALLATION INSTRUCTIONS

CHANNEL S INSTALL

SERIES

- CHANNELS ARE NUMBERED ACCORDING TO INCREASING DEPTH FOR EASY CONFIGURATION.
- ASSEMBLE SECTIONS TOGETHER WITH GASKETS AND HARDWARE PROVIDED.
- 3. ANCHOR TABS MAY NEED TO BE BENT OUTWARD BEFORE CONCRETE POUR.
- 4. USE LEVELING FEET TO SET CHANNEL RUN HEIGHT AND LEVEL WITH FINISHED FLOOR. FEET CAN BE SECURED TO ROUGH-IN FLOOR.
- 5. CONNECT CHANNEL OUTLET(S) TO PIPE SYSTEM.

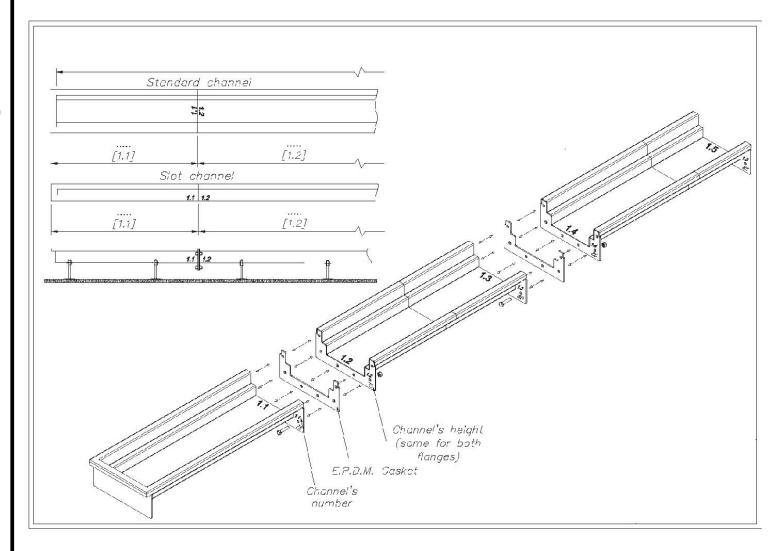

DATE OF LAST CHANGE:

12/18/13

DIMENSIONS ARE SUBJECT TO MANUFACTURERS
TOLERANCES AND CHANGE WITHOUT NOTICE.
WE CAN ASSUME NO RESPONSIBILITY FOR
USE OF SUPERSEDED OR VOID DATA.

JOSAM COMPANY

NOTES